



Installation

- A Remove packaging from lockers.
- B Remove keys from base of lockers.
- C Place locker in upright position in desired location.
- D Place correct keys in door locks and check locks work correctly.
- E Plug in to the mains via power socket found at rear of unit, kettle / IEC style the opposite end to be professionally wired to customers' electrical system by a qualified electrician.

Usage

- F Unlock each compartment front door using the lock.
- G Place power adaptor in compartment and plug into 3 pin socket.
- H Place Laptop* into compartment.
- I Connect the power adapter into Laptop*
- J Ensure power adaptor is on the relevant side, so not to trap power cables.
- K Close and Lock door.

Note: if the units are with castors 2 have lockable wheels. Please lock when unit is in position by pushing down on the castor foot plate.

See Note (E) above for electical conections







Rear View

Front View

Power consumption for each Laptop power tower

- **8** door 1.625 amp
- **10** door 1.3 amp
- **15** door .86 amp